Rivet Lock Boltless Shelving

Safety Instructions

These units should be placed on a level surface. Failure to do so can result in poor product performance or create a possible safety hazard. This unit should be securely anchored to a wall or floor with suitable fasteners, which are not included. Do not use this unit for anything other than the manufactures intended purpose. **DO NOT STAND ON ANY PART OF THE UNIT, OR USE IT AS A LADDER.** Evenly distribute the weight on each level and always keep the heavier loads on the bottom. Use care when working with metal parts.

General Instructions

Assembly is done with the rivets of the beams and braces fitting into the slots of the post. A rubber mallet may be used on the beams and braces to seat the rivets properly. A hammer can also be used, providing one uses a cloth or a block of wood between the hammer head and the parts to prevent damage. Tap gently and be sure the rivets are straight and fully engaged.

PARTS LIST & DESCRIPTION

SKU #	Upright Post (RLSU) 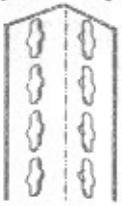	Braces (RMF) 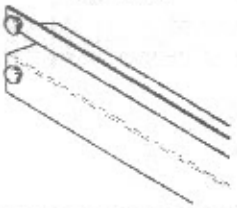	Beams (RMB) 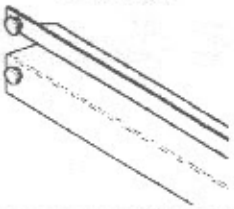	Wood Shelf (RPB) 
UR1860-UN	(8) RLSU36	(6) RMF18GY	(6) RMB60GY	18" x 60"
UR2460-UN	(8) RLSU36	(6) RMF24GY	(6) RMB60GY	24" x 60"
UR1872-UN	(8) RLSU36	(6)RMF18GY	(6) RMB72GY	18" x 72"
UR2472-UN	(8) RLSU36	(6) RMF24GY	(6) RMB72GY	24" x 72"

Should you have any comments, damage, missing parts, or problems with assembly of this unit please feel free to contact our Edsal manufacturing facility at, (773) 475-3000 and request customer service. We can also be reached on the internet at the following email address : customerservice@edsal.com.

To obtain replacement parts, please provide the following information :

- Model # - Part # & Description - Location Purchased - Date Purchased

Industrial Products Division
Edsal Manufacturing Company
4400 South Packers Avenue
Chicago, IL 60609
www.edsal.com

Assembly Instructions for Rivet Lock Boltless Shelving Kit

Step 1

Figure B

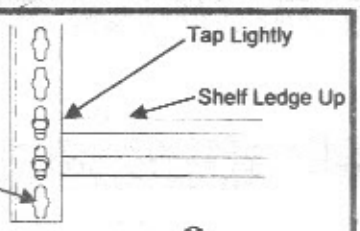

Figure A

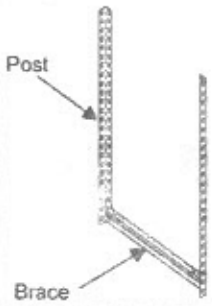

Figure C

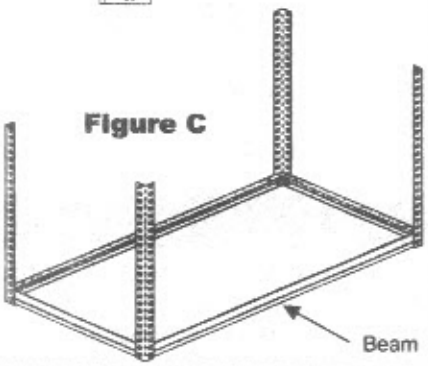

Assemble two (2) post with one (1) brace. Skipping one slot from the bottom of the post, place the rivets into post with the shelf ledge of the brace facing up (see figure A & B). Tap lightly to seat rivets. Repeat with two (2) post and one (1) brace. Assemble the two (2) post units with two (2) beams. Skip one hole from the bottom of post, and tap lightly to seat rivets (see figure C).

Step 2

Figure D

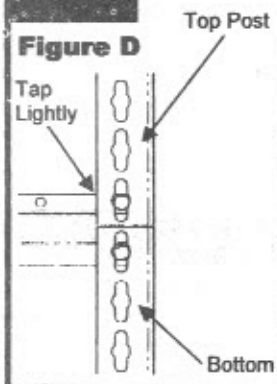

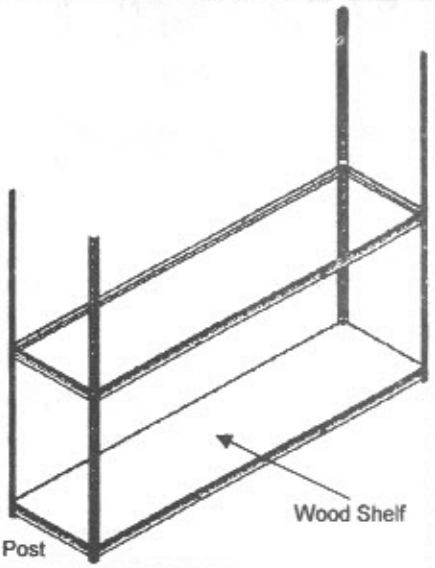

Add a wood shelf to the previously built level, then assemble the top post to the bottom post by using two (2) beams and two (2) braces. One (1) rivet from each beam and brace must be placed in the top hole of the bottom post, and the bottom hole of the top post (see figure D). After all beams and braces are in place, tap lightly to properly seat the rivets.

IMPORTANT NOTE : Make sure all rivets are fully seated into the post slots.

Step 3

Figure E

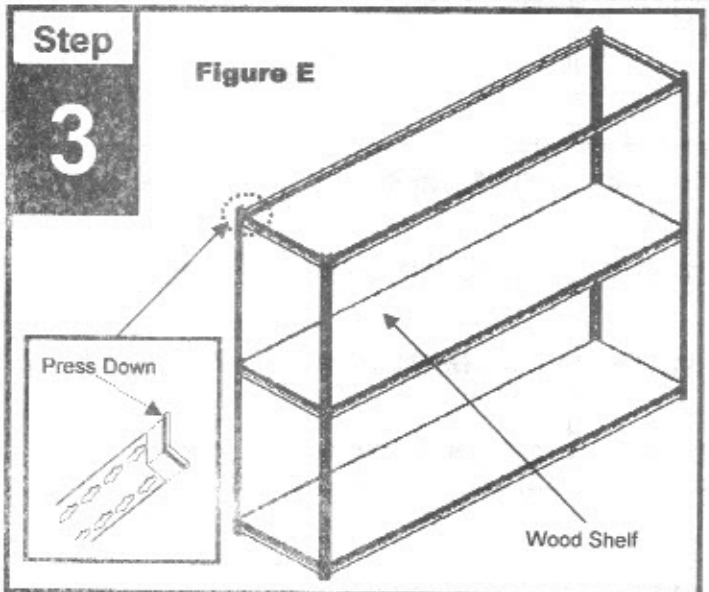

Add a wood shelf to the previously built level, then continue by adding the final level to the unit using one (2) beam and one (1) brace. Tap lightly to properly seat the rivets and add the final wood shelf to the unit. Install all four (4) end caps to the top of the unit after assembly has been completed. Install end caps to post by pressing down on end cap at the three points illustrated above (see figure E).